
Removing & Installing Body Components

Front Top Cover

The front top cover must be removed for front turn signal bulbs replacement.

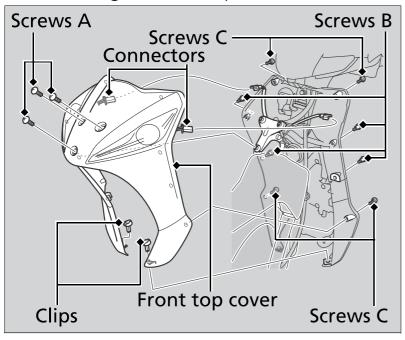

Removal

- 1. Remove the clips. ▶ P. 56
- **2.** Remove the screws A, screws B and screws C.
- **3.** Remove the front top cover, then disconnect the connectors.

I Installation

Install the parts in the reverse order of removal.