

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Place your motorcycle on the centre stand on a level surface.
2. Stop the engine place the gear in Neutral.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both sides of the drive chain adjusters.

