


AIR CLEANER

(Refer to the maintenance precautions on page 49).

The air cleaner should be serviced at regular intervals (page 43). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (page 31).
2. Remove the air cleaner housing cover (1) by removing the screws (2).
3. Pull out the element retainer (3) and remove the air cleaner (4).

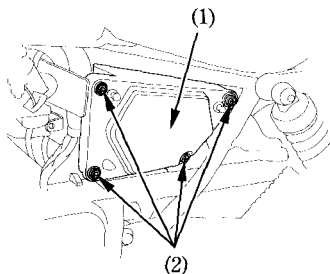


(1) Air cleaner housing cover (2) Screws

4. Disconnect the tube (5) from the air cleaner.
5. Discard the air cleaner.
6. Install the new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

7. Install the removed parts in the reverse order of removal.

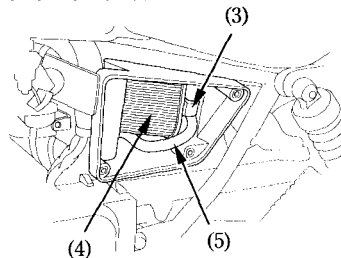

(3) Element retainer (5) Tube
(4) Air cleaner