

Fuse Box:  
**CBI300/S**

The fuse box is located behind the left side cover.

The specified fuses are:

10A, 20A



**CB1300A/SA**

The fuse boxes are located behind the left side cover.

The specified fuses are:

10A, 20A, 30A

1. Remove the left side cover (page 86 ).
2. Open the fuse box covers (1).
3. Pull out the old fuse and install a new fuse.  
The spare fuses (2) are located in the fuse box.
4. Close the fuse box cover and install the front seat.

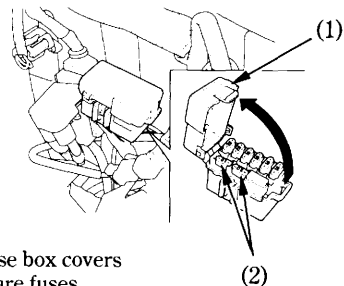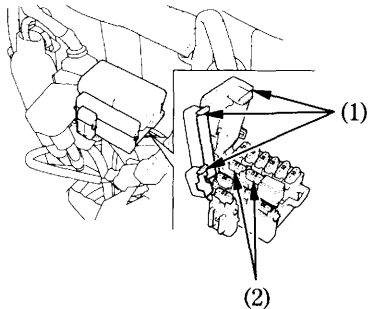

- (1) Fuse box covers  
(2) Spare fuses