

5. Align the front edge of the adjuster plates (4) with the corresponding scale (5) graduations on the sides of both swingarms.

Both left and right marks should correspond. If the axle is misaligned, turn the left or right adjusting bolt until the marks correspond on the scale graduation on the swingarm and recheck chain slack.

6. Tighten the axle nut to specified torque.

Axle nut torque:

113 N·m (11.5 kgf·m , 83 lbf·ft)

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.

7. Tighten the adjusting bolts lightly by turning it counterclockwise, then tighten the lock nuts by holding the adjusting bolts with a spanner.
8. Recheck drive chain slack.