

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE(1)]								Refer to
			x1,000km	1	6	12	18	24	30	36	
			x1,000mi	0.6	4	8	12	16	20	24	
			MONTHS		6	12	18	24	30	36	
	DRIVE CHAIN			I, L EVERY 1000km (600mi)						Pages 56–57	
	BRAKE SHOE/PAD WEAR			I	I	I	I	I	I	I	Pages 12, 14
	BRAKE SYSTEM			I		I		I		I	Pages 11–14
*	BRAKE LIGHT SWITCH					I		I		I	—
*	HEADLIGHT AIM					I		I		I	—
	CLUTCH SYSTEM			I	I	I	I	I	I	I	Pages 15–16
	SIDE STAND					I		I		I	Page 65
*	SUSPENSION					I		I		I	—
*	NUTS, BOLTS, FASTENERS			I		I		I		I	—
**	WHEELS/TYRES					I		I		I	—
**	STEERING HEAD BEARINGS			I		I		I		I	—

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

* * IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

Honda recommends that your authorized Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in unusually wet or dusty areas.

(3) Service more frequently when riding in rain or at full throttle.

(4) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.