

3. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

NOTE:

* If proper adjustment cannot be obtained by this method see your authorized Honda dealer.

Other checks:


Make sure the brake cable, brake arm, spring and fasteners are in good condition.

Brake Shoe Wear

The front brake is equipped with a brake wear indicator.

When the brake is applied, an arrow (1) attached to the brake arm (2) moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

See your authorized Honda dealer for this service.

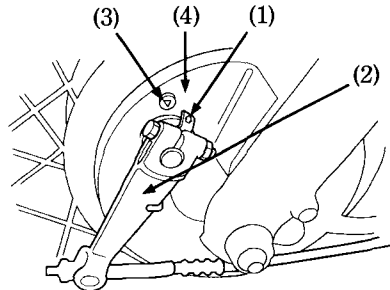

- | | |
|---------------|--------------------|
| (1) Arrow | (3) Reference mark |
| (2) Brake arm | (4) Brake panel |