


## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the engine stop switch to OFF and push the choke knob to Fully OFF (B). Open the throttle fully and crank the engine for 5 seconds. Wait 10 seconds, then turn the engine stop switch to RUN and follow the "High Air Temperature" Starting Procedure (page 34).

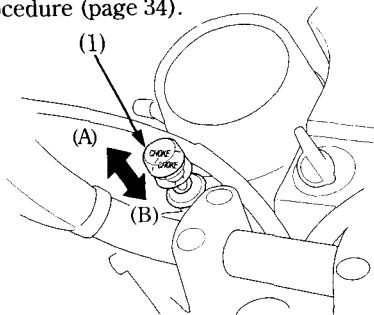

(1) Choke knob

(A) Fully ON  
(B) Fully OFF

## RUNNING-IN

During the first 1,000 km (600 miles), avoid full throttle use and never labour the engine. Do not operate at any one speed for prolonged periods.

During initial running-in newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running-in maintenance at 1,000km (600 miles) is designed to compensate for this initial minor wear. Timely performance of the running-in maintenance will ensure optimum service life and performance from the engine.