


CRANKCASE BREATHER

(Refer to the maintenance precautions on page 47).

1. Remove the drain plug (1) from the tube and drain deposits.
2. Reinstall the drain plug.

NOTE:

- * Service more frequently when riding in rain or at full throttle.

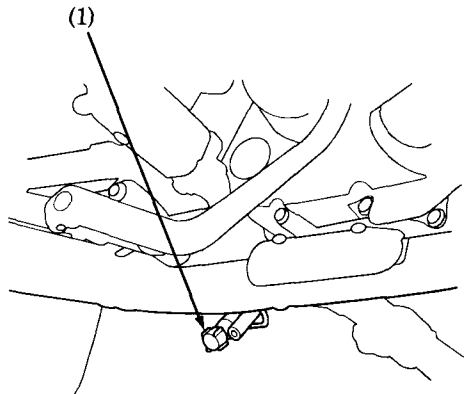

(1) Drain plug