

Removing & Installing Body Components ► Clips

 
Clips

The clips must be removed to remove the side covers.

Maintenance

Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.



Installation

1. Push the bottom of the centre pin.
2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.