


Other Adjustments ▶ Adjusting the Headlight Aim

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion using a Phillips screwdriver provided in the tool kit (▶ P. 57) in or out as necessary. Obey local laws and regulations.

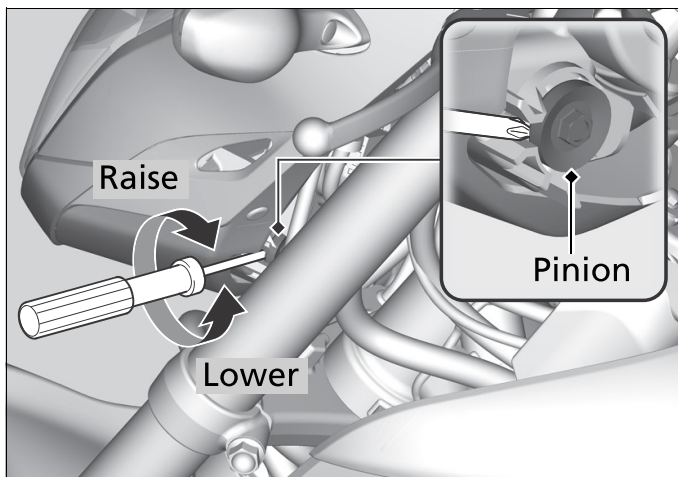

Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Hold the brakelight switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

