


## Headlight Assembly

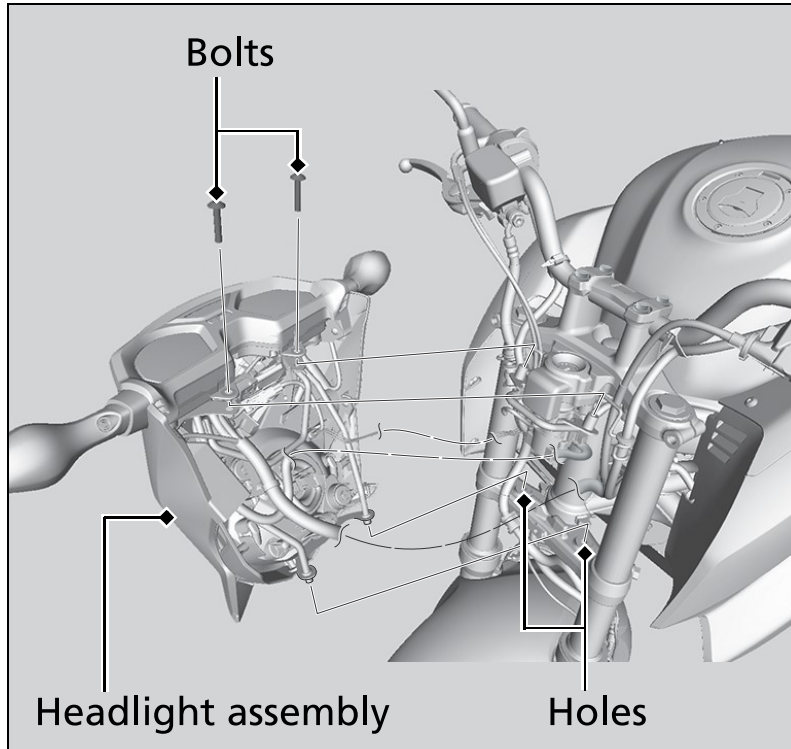

The headlight assembly must be removed to replace the headlight bulb.

When removing and installing the headlight assembly, be careful not to damage the wire harness.

### ■ Removal

1. Remove the bolts.
2. Remove the headlight assembly by releasing it from the holes of the bottom bridge.

### ■ Installation

Install the parts in the reverse order of removal.