



Headlight bulb

1. Remove the half fairing on the side on which the headlight bulb is to be replaced (page 54)
2. Remove the dust cover (1).

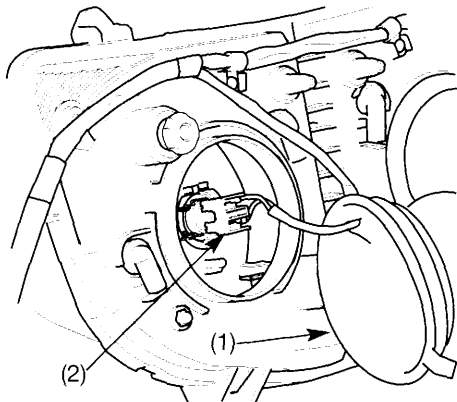

- (1) Dust cover
(2) Headlight bulb socket

3. Remove the headlight bulb socket (2) without causing it to rotate.
4. Disengage and lift the two lateral bulb-holder clips (3).
5. Remove bulb (4) from the disassembled headlight.

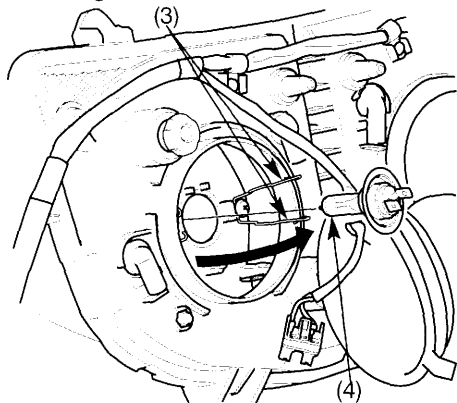

- (3) Bulb holder clips
(4) Headlight bulb