

MAINTENANCE

Page		Page	
48	MAINTENANCE	80	Brake Pad Wear
49	Maintenance Schedule	81	Battery
51	Tool Kit	84	Fuse Replacement
52	Serial Numbers	86	Stop Switch Adjustment
53	Colour Label		
54	Maintenance Precautions	87	CLEANING
55	Fairing		
56	Air Cleaner	88	STORAGE GUIDE
57	Crankcase Breather	88	Storage
58	Engine Oil	89	Removal from Storage
61	Sparke Plugs		
64	Throttle Operation	90	SPECIFICATIONS
65	Idle Speed	94	NOISE CONTROL SYSTEM
66	Drive Chain		(AUSTRALIA ONLY)
71	Front and Rear Suspension		
72	Side Stand		
73	Wheel Removal		