

## Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

### Speedometer

Shows riding speed.


### Odometer

Shows accumulated mileage.


This meter can be displayed to 0 to 99,999 kilometers (miles). If the display exceeds 99,999 kilometers (miles), it will return to 0 automatically.

If you drive 100,000 kilometers (miles) or more, the total mileage of the odometer can be displayed in the following ways.

Press and hold the RESET button (3), turn on the ignition switch. Keep the RESET button pressed in until the initial display is completed. The number in the 6th digit and the number of the five digits are shown alternately for 10 seconds. After the above-mentioned indication, the display will return to the ordinary conditions.

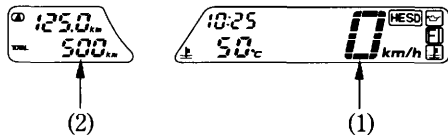

Example: the case of 123,000 km run.

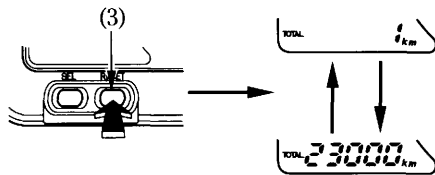

- (1) Speedometer
- (2) Odometer
- (3) RESET button