

MIDDLE COWL

The right and left middle cowls can be removed in the same manner.

Removal:

1. Remove the bolt A (1), bolt B (2), bolts C (3) and clip A (4), clips B (5), clips C (6).
2. Remove the middle cowl (7) and disconnect the front turn signal connector (8).

Installation:

- Installation can be done in the reverse order of removal.