Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in neutral (neutral indicator is ON).
- The engine stop switch is at (RUN).
- The warning indicator is ON.
- The low oil pressure indicator is ON.
- The PGM-FI indicator is OFF.
- The high coolant temperature indicator is OFF.
- The HESD indicator is OFF.
- The immobilizer system (HISS) indicator is OFF.
- The Combined ABS indicator is ON. 〈CBR1000RR ABS〉

The warning indicator and low oil pressure indicator should go off a few seconds after the engine starts. If the warning indicator and the low oil pressure indicator light during operation, stop the engine immediately and check the engine oil level.

⟨CBR1000RR ABS⟩

The Combined ABS indicator should go off after you ride the motorcycle at a speed above 10 km/h (6 mph).

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.