

## UPPER COWL COVER


The right and left upper cowl covers can be removed in the same manner.

### Removal:

1. Remove the nut (1) and long mount bolt (2).
2. Remove the short mount bolt (3).
3. Remove the clip (4).
4. Remove the upper cowl cover (5).

### Installation:

- Installation can be done in the reverse order of removal.

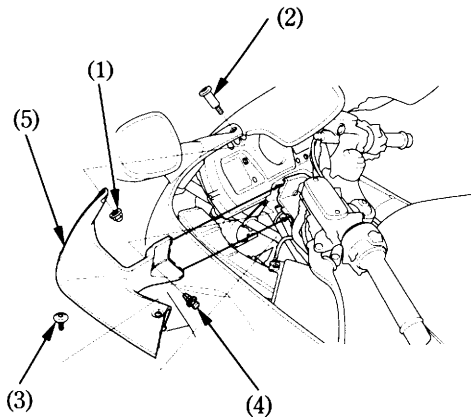

(1) Nut

(2) Long mount bolt

(3) Short mount bolt

(4) Clip

(5) Upper cowl cover