

### Initial Display


When the ignition switch is turned ON, the multi-function display (1) and speedometer (2) will temporarily show all the modes and digital segments. Thereafter, the speedometer will show from 290 km/h to 0 km/h (E type only: From 180 mph to 0 mph in mph) and the coolant temperature meter (3) will show from 132°C to 35°C.

In the view of that operation, you can make sure the liquid crystal display is functioning properly.

(Except digital clock)

The unit "mph" and "mile" will be displayed only for E type.

Digital clock (4) and tripmeter (5) will reset if the battery is disconnected.

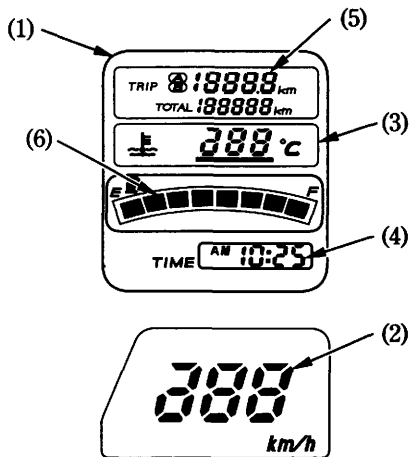

- |                               |                      |
|-------------------------------|----------------------|
| (1) Multi-function display    | (4) Digital clock    |
| (2) Speedometer               | (5) Tripmeter        |
| (3) Coolant temperature meter | (6) Fuel gauge meter |