


## Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold the SET button (2) for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.

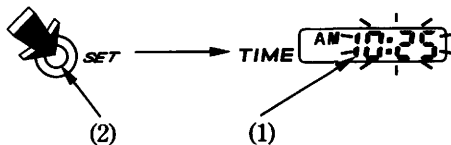

- (1) Digital clock  
(2) SET button

3. Push the SET button until the desired time is displayed.
  - The time is advanced by one minute, each time the SET button is pushed.
  - The time is advanced by ten minutes, when the SET button is pushed and held.
4. Push the SET button after five seconds pass with not doing anything to enter the time.  
When the ignition switch is turned OFF while set the clock in the adjust mode, the time will be fixed as just before the ignition OFF.