


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the knob (1) in or out as necessary.

Remove the upper cowl cover (page 59) to adjust headlight aim.

Obey local laws and regulations.

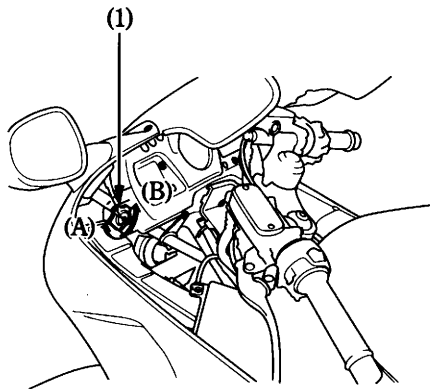

(1) Knob

(A) Up

(B) Down