



1. Remove the lower cowl (page 57 ).
2. To drain the oil, remove the oil filler cap and oil drain plug (1) and sealing washer (2).

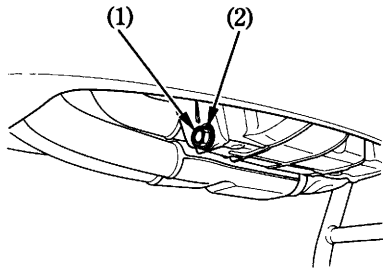

(1) Oil drain plug      (2) Sealing washer

3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out.

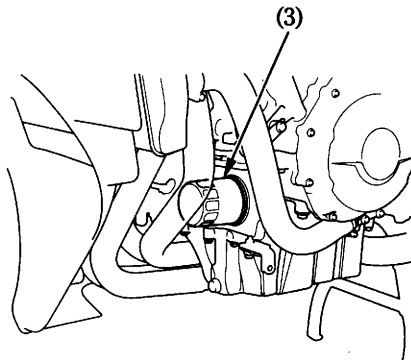

(3) Oil filter