



6. Loosen the right and left axle pinch bolts (7), and remove the front axle bolt (8).
7. Remove the front axle shaft (9), front wheel and side collars.

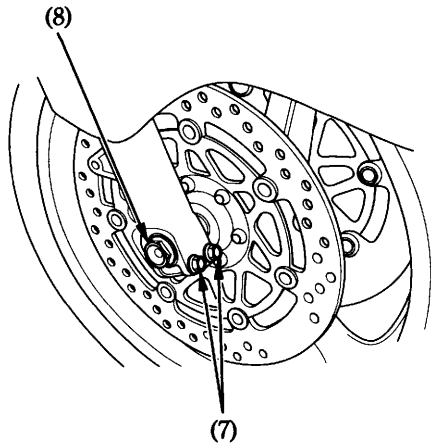

(7) Axle pinch bolts

(8) Axle bolt

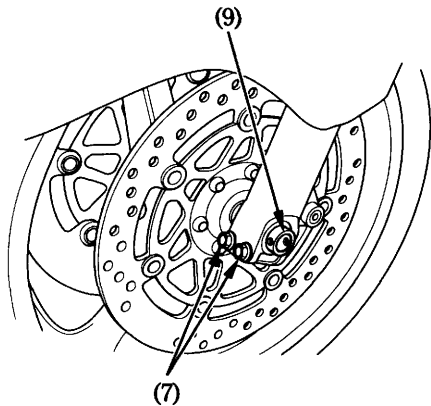

(9) Front axle shaft