


FUEL TANK MAINTENANCE POSITION

The rear of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Remove the two bolts (1) with washers.
2. Remove the right and left inner panels (2) from the fuel tank by releasing it from the grommets (3) on the fuel tank.
3. Raise the rear of the fuel tank (4) and place an extension bar (5) from the tool set between the rear of the fuel tank and frame.
4. Insert a 27mm box end wrench (6) from the tool set in the extension bar to hold the fuel tank in its applied position.

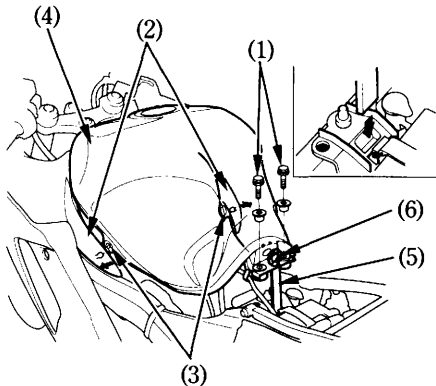

- | | |
|------------------|-------------------------|
| (1) Bolts | (4) Fuel tank |
| (2) Inner panels | (5) Extension bar |
| (3) Grommets | (6) 27mm box end wrench |