



## BRAKE SYSTEM INSPECTION

(Refer to the maintenance precautions on page 66).

Check the brake system as follows:

1. Place the motorcycle on its center stand, stop the engine, and place the transmission in neutral.

3. Move the left caliper assembly (1) upward while slowly rotating the rear wheel. The brake system is normal if the rear wheel stops. If the rear wheel does not stop, see your authorized Honda dealer.

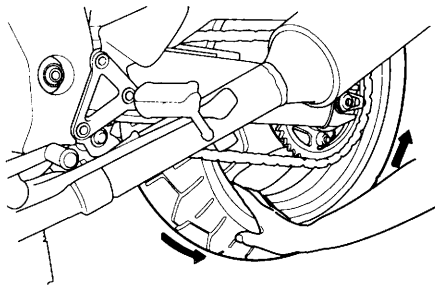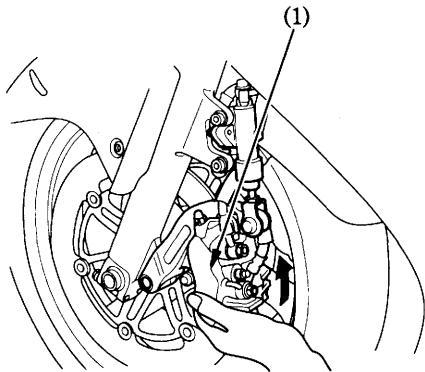

(1) Left caliper assembly