

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult their authorized HONDA dealer.

ITEM	FREQUENCY	WHICHEVER ⇄ ODOMETER READING (NOTE 1) COMES FIRST ↓	ODOMETER READING (NOTE 1)				REFER TO PAGE	
			X1,000 km	1	4	8		12
			X1,000 mi	0.6	2.5	5		7.5
			MONTH		6	12	18	
* FUEL LINE				I	I	I		3-4
* THROTTLE OPERATION				I	I	I		3-4
* CHOKE OPERATION				I	I	I		3-5
AIR CLEANER	NOTE 2			C	C	R		3-5
CRANKCASE BREATHER	NOTE 3			C	C	C		3-6
SPARK PLUG				I	R	I		3-6
* VALVE CLEARANCE				I	EVERY 24,000 km (16,000 mi): I			3-8
ENGINE OIL				R		R		3-10
** ENGINE OIL STRAINER SCREEN						C		3-12
* ENGINE IDLE SPEED				I	I	I	I	3-12
RADIATOR COOLANT	NOTE 4					I		3-13
* COOLING SYSTEM						I		3-14
* SECONDARY AIR SUPPLY SYSTEM	NOTE 5					I		3-14
DRIVE CHAIN				EVERY 1,000 km (600 mi): I, L				3-15
BRAKE FLUID	NOTE 4			I	I	I		3-17
BRAKE PADS WEAR				I	I	I		3-18
BRAKE SYSTEM				I	I	I		3-18
* BRAKE LIGHT SWITCH				I	I	I		3-18
* HEADLIGHT AIM				I	I	I		3-19
CLUTCH SYSTEM				I	I	I		3-19
SIDE STAND				I	I	I		3-20
* SUSPENSION				I	I	I		3-20
* NUTS, BOLTS, FASTENERS				I	I	I		3-21
** WHEELS/TIRES				I	I	I		3-21
** STEERING HEAD BEARINGS				I	I	I		3-22

* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

** In the interest of safety, we recommend these items be serviced only by an authorized Honda dealer.

- NOTES:
1. For higher odometer readings, repeat at the frequency interval established here.
 2. Service more frequently when riding in unusually wet or dusty areas.
 3. Service more frequently when riding in rain at full throttle.
 4. Replace every 2 years. Replacement requires mechanical skill.
 5. Replace every 3 years or 24,000 km. Replacement requires mechanical skill.