

## MAINTENANCE


### BRAKE PAD WEAR

#### FRONT BRAKE PAD

Check the brake pad for wear.

Replace the brake pads if either pad is worn to the bottom of wear limit groove.

Refer to page 16-5 for front brake pad replacement.

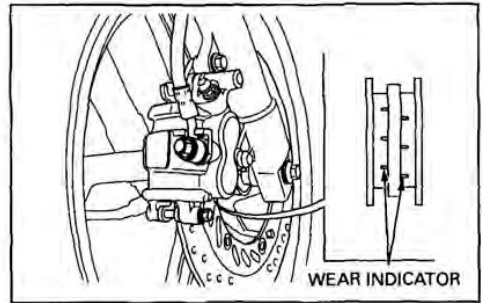


#### REAR BRAKE PAD

Check the brake pads for wear.

Replace the brake pads if the wear limit groove of either pad is worn out.

Refer to page 16-6 for rear brake pad replacement.

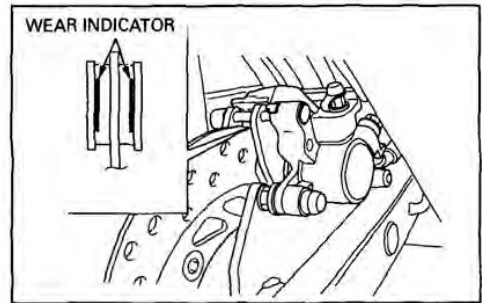

### BRAKE SYSTEM

#### INSPECTION

Firmly apply the brake lever or pedal, and check that no air has entered the system.


If the lever or pedal feels soft or spongy when operated, bleed the air from the system.

Inspect the brake hose and fittings for deterioration, cracks and signs of leakage.

Tighten any loose fittings.

Replace hoses and fittings as required.

Refer to page 16-3 for brake bleeding procedures.

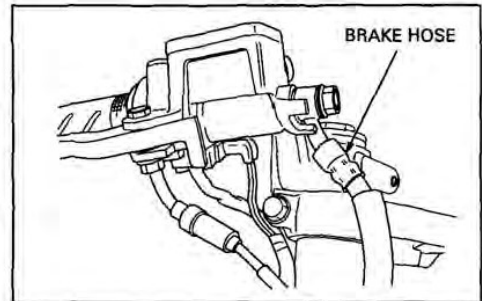

### BRAKE LIGHT SWITCH

#### NOTE:

The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brakelight comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the switch so that the light comes on at the proper time.

Hold the switch body and turn the adjuster. Do not turn the switch body.

