


## CLUTCH/GEARSHIFT LINKAGE

### Clutch spring

Check the clutch spring for fatigue or other damage.


Measure the clutch spring free length.

**SERVICE LIMIT: 36.6 mm (1.44 in)**

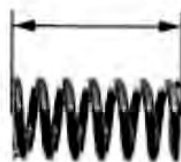

### Clutch disc

Check the clutch discs for signs of scoring or discoloration.

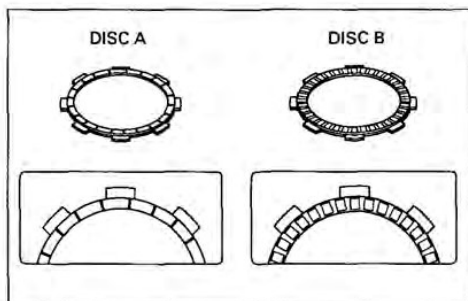

Measure the thickness of the discs.

**SERVICE LIMITS:** Disc A — 3.1 mm (0.12 in)  
Disc B — 2.60 mm (0.102 in)

### NOTE:

Replace the discs and plates as a set.



### Clutch plate

Check the plate for excessive warpage or discoloration. Check the plate warpage on a surface using a feeler gauge.

**SERVICE LIMIT: 0.2 mm (0.008 in)**

