

## GEARSHIFT LINKAGE


### REMOVAL

Remove the following:

- gearshift arm
- right crankcase cover (page 8-3)
- clutch assembly (page 8-4)

Remove the bolt, washer and gearshift cam plate.

Remove the pins from the shift drum.

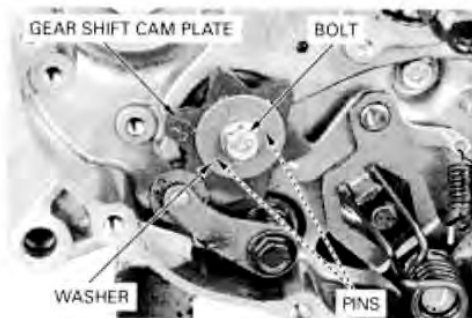


Remove the bolt, washer, stopper arm and return spring.

Remove the gearshift spindle.

Check the gearshift cam plate and stopper arm for wear or damage.

Check the stopper arm return spring for fatigue or damage.

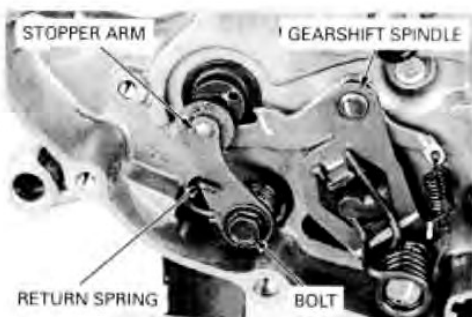

Check the gearshift spindle for vent or damage.



### INSTALLATION

Apply molybdenum oil solution to the gearshift spindle shaft and install the gearshift spindle to the gearshift return spring pin.

