

## CLUTCH/GEARSHIFT LINKAGE

---

Connect the water hoses and tighten the hose band screws.



Connect the clutch cable end to the lifter arm.  
Adjust the clutch lever free play (page 3-2).

Install the under cowl (page 2-3).  
Fill and bleed the cooling system (page 6-5).  
Fill the recommended engine oil (page 3-10).

