



Remove the cylinder head bolts.  
Loosen the cylinder head nuts in a crisscross pattern in 2 to 3 steps, and remove them and washers.

Remove the cylinder head.

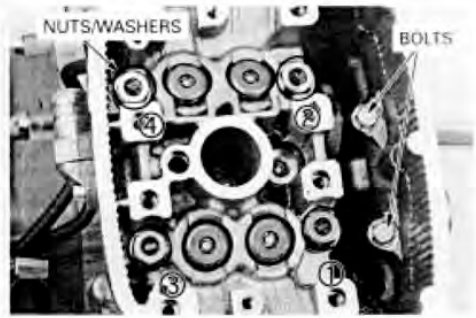

Remove the gasket and dowel pins.

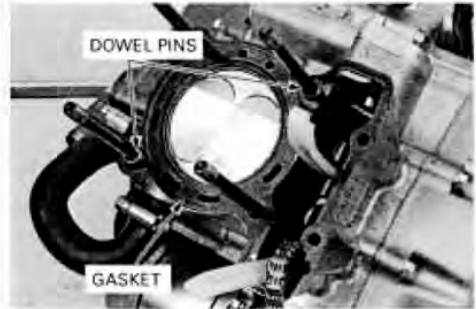

## CAM CHAIN TENSIONER LIFTER

### REMOVAL

Remove the two bolts and cam chain tensioner lifter.



### INSPECTION

Remove the tensioner lifter plug.

Check the lifter operation:

- The tensioner shaft should not go into the body when it is pushed.
- When it is turned clockwise with a screwdriver, the tensioner shaft should be pulled into the body. The shaft spring out of the body as soon as the screwdriver is released.

