

If removed the front tire, inspect the wheel balance (page 15-3).

Apply grease to the speedometer gear retainer, and install it into the left side hub aligning its tabs with the slots in the hub.



Apply grease to a new left dust seal lips, then install it into the wheel hub.




Install a new right dust seal and brake disc with the stamped mark "MIN.TH, 3.5 mm" facing out side.

Apply grease to the dust seal lips.

Tighten the brake disc mounting bolts to the specified torque.

**TORQUE: 42 N-m (4.3 kgf-m, 31 lbf-ft)**

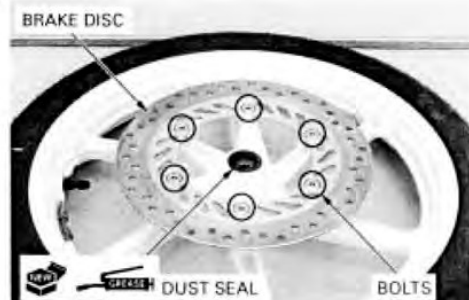

Install the right side collar.

