

REAR WHEEL/SUSPENSION

TOOLS

Bearing remover head, 12 mm	07746 – 0050300
Bearing remover shaft	07746 – 0050100
Driver	07749 – 0010000
Attachment, 37 x 40 mm	07746 – 0010200
Pilot, 12 mm	07746 – 0040200

TROUBLESHOOTING

Wobble or vibration in motorcycle

- Bent rim
- Bent spokes
- Damaged tire
- Axle not tightened properly
- Chain adjusters not adjusted equally

Soft suspension

- Weak spring
- Oil leakage from damper unit
- Tire pressure too low

Hard suspension

- Bent damper rod
- Bent frame or swing arm
- Tire pressure too high

Suspension noise

- Faulty damper
- Loose fasteners

Steers to one side or does not track straight

- Bent rear axle
- Axle alignment/chain adjustment not equal both sides