

BRAKE SYSTEM

REAR MASTER CYLINDER

REMOVAL

CAUTION:

- *Avoid spilling fluid on painted, plastic or rubber parts.*
- *Place a shop towel over these parts whenever the system is serviced.*

NOTE:

- When removing the brake hose bolt, cover the end of the hose to prevent contamination.
- Secure the hose to prevent fluid from leaking out.

Drain the brake fluid from the rear brake hydraulic system (page 16-3).



Remove the brake hose bolt, sealing washers and brake hose.

Remove the rear master cylinder mounting bolts.

Remove the mounting bolts and right main step holder with the rear brake light switch installed.

Remove the cotter pin, joint pin and rear master cylinder.

Remove the bolt and reservoir.

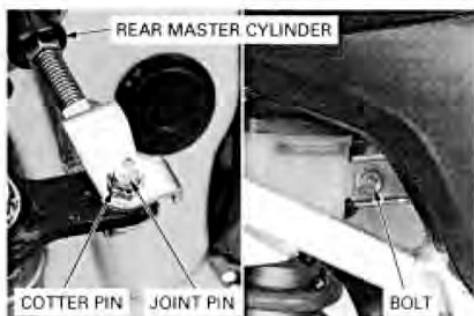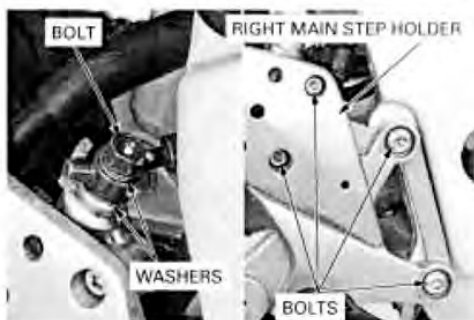

DISASSEMBLY

Remove the screw, O-ring and joint pipe.



Remove the boot.

