

## BRAKE SYSTEM

Check the pad spring for damage and replace it if necessary.

Install the pad spring onto the caliper body.

PAD SPRING



## INSTALLATION

Install the rear brake caliper/bracket assembly onto the swingarm by aligning the bracket slot with the boss on the swingarm.

Install the rear wheel (page 15-9).

Install the brake pads (page 16-5).

Temporarily install the brake hose eyelet joint to the caliper body with new sealing washers and bolts. Push the brake hose eyelet joint to the stopper on the caliper, then tighten the bolt to the specified torque.



**TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)**

Fill and bleed the rear brake hydraulic system (page 16-3).

## BRAKE PEDAL

### REMOVAL

Remove the mounting bolts and right main step holder.

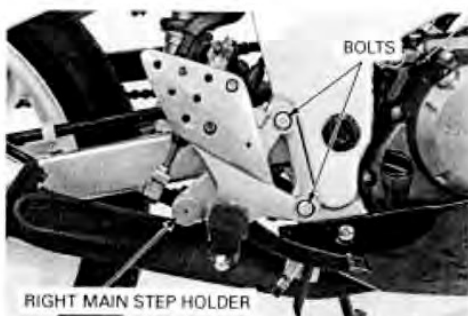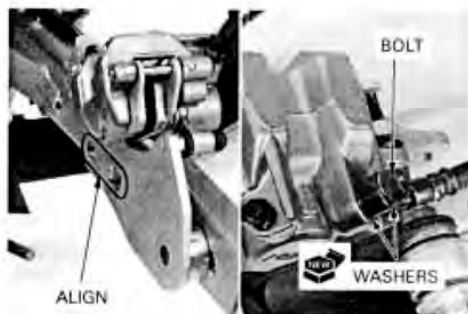

Remove the brake light switch return spring.

Remove the cotter pin and joint pin.

Remove the cotter pin, washer, return spring and brake pedal.

