

The ignition timing is correct if the "F" mark aligns with the index notch on the left crankcase cover.



Apply oil to the O-ring and install and tighten the timing hole cap to the specified torque.

TORQUE: 6 N-m (0.6 kgf-m, 4.3 lbf-ft)

