

## TROUBLESHOOTING

**Headlight do not come on or bulb is frequently burned when the engine is started**

- Faulty lighting and/or dimmer switch
- Faulty bulb
- Faulty alternator lighting coil (section 17)
- Faulty regulator/rectifier (section 17)
- Loose or poorly connected connector

**Headlight beam does not shift when Hi-Lo switch is operated**

- Burned bulb
- Faulty dimmer switch
- Loose or poorly connected connector