

## IGNITION SWITCH

### INSPECTION


Remove the fuel tank (page 5-3).

Disconnect the ignition switch 2P connector.

Check for continuity between the wire terminals of the ignition switch connector in each switch position. Continuity should exist between the color coded wires as follows:


### IGNITION SWITCH

	BAT	HO1
ON	○ — ○	○
OFF		
LOCK		
COLOR	R	B

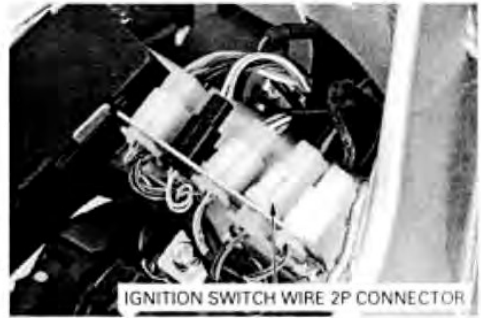

### REMOVAL/INSTALLATION

Disconnect the ignition switch 2P connector.

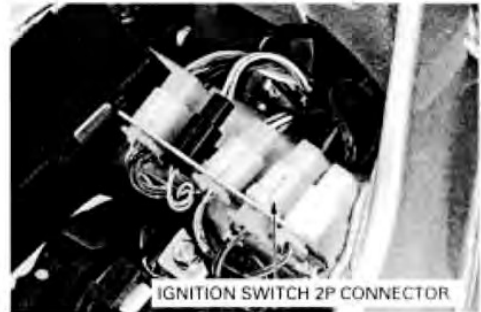

Remove the two bolts and ignition switch.

Install the ignition switch in the reverse order of removal.

