

AIR CLEANER	3-5	HANDLEBAR	14-3
AIR CLEANER HOUSING	5-4	HANDLEBAR SWITCHES	20-8
ALTERNATOR/STATOR	9-2	HEADLIGHT AIM	3-19
ALTERNATOR INSPECTION	17-7	HORN	20-13
BATTERY	17-4	IGNITION COIL	18-5
BODY PANEL LOCATIONS	2-0	IGNITION CONTROL MODULE (ICM)	18-5
BRAKE FLUID	3-17	IGNITION SWITCH	20-7
BRAKE FLUID REPLACEMENT/AIR BLEEDING	16-3	IGNITION SYSTEM INSPECTION	18-3
BRAKE LIGHT SWITCH	3-18	IGNITION TIMING	18-6
BRAKE LIGHT SWITCH (SYSTEM INSPECTION)	20-8	LEFT CRANKCASE COVER INSTALLATION	9-8
BRAKE PAD WEAR	3-18	LEFT CRANKCASE COVER REMOVAL	9-2
BRAKE PEDAL	16-22	LUBRICATION & SEAL POINTS	1-15
BRAKE PAD/DISC	16-5	LUBRICATION SYSTEM DIAGRAM	4-0
BRAKE SYSTEM	3-18	MAINTENANCE SCHEDULE	3-3
BULB REPLACEMENT	20-3	MIDDLE COWL	2-4
CABLE & HARNESS ROUTING	1-17	MODEL IDENTIFICATION	1-3
CARBURETOR ASSEMBLY	5-9	NUTS, BOLTS, FASTENERS	3-21
CARBURETOR CHOKE	3-5	OIL PUMP	4-2
CARBURETOR DISASSEMBLY	5-6	PASSENGER GEAR SEAT	2-2
CARBURETOR INSTALLATION	5-13	PILOT SCREW ADJUSTMENT	5-14
CARBURETOR REMOVAL	5-4	PISTON INSTALLATION	11-7
CHARGING SYSTEM INSPECTION	17-5	PISTON REMOVAL	11-4
CLUTCH	8-4	POOR HANDLING	22-4
CLUTCH/NEUTRAL DIODE	19-11	POOR PERFORMANCE AT HIGH SPEED	22-4
CLUTCH SWITCH	20-16	POOR PERFORMANCE AT LOW AND IDLE SPEED	22-3
CLUTCH SYSTEM	3-19	PRIMARY DRIVE GEAR	8-12
COMBINATION METER	20-5	RADIATOR COOLANT	3-13
COOLANT REPLACEMENT	6-4	RADIATOR/COOLING FAN	6-8
COOLANT TEMPERATURE GAUGE/THERMOSENSOR	20-15	RADIATOR RESERVE TANK	6-12
COOLING FAN MOTOR SWITCH	20-14	REAR BRAKE CALIPER	16-19
COOLING SYSTEM	3-14	REAR COWL	2-2
CRANKCASE ASSEMBLY	12-13	REAR FENDER	2-3
CRANKCASE BREATHER	3-6	REAR MASTER CYLINDER	16-12
CRANKSHAFT INSTALLATION	13-5	REAR WHEEL	15-3
CRANKSHAFT REMOVAL	13-2	REGULATOR/RECTIFIER	17-8
CYLINDER INSTALLATION	11-8	RIGHT CRANKCASE COVER INSTALLATION	8-13
CYLINDER REMOVAL	11-3	RIGHT CRANKCASE COVER REMOVAL	8-3
CYLINDER COMPRESSION	10-3	SECONDARY AIR SUPPLY SYSTEM (MAINTENANCE)	3-14
CYLINDER HEAD ASSEMBLY	10-17	SECONDARY AIR SUPPLY SYSTEM (SYSTEM INSPECTION)	5-15
CYLINDER HEAD DISASSEMBLY	10-8	SERVICE INFORMATION (ALTERNATOR/STARTER CLUTCH)	9-1
CYLINDER HEAD INSTALLATION	10-19	(COOLING SYSTEM)	6-1
CYLINDER HEAD REMOVAL	10-4	(CHARGING SYSTEM)	17-1
DRIVE CHAIN	3-15	(BRAKE SYSTEM)	16-1
DRIVER SEAT	2-2	(CLUTCH/GEARSHIFT LINKAGE)	8-1
ENGINE IDLE SPEED	3-12	(CRANKSHAFT/BALANCER)	13-1
ENGINE LACKS POWER	22-2	(CYLINDER HEAD/VALVES)	10-1
ENGINE OIL	3-10	(CYLINDER/PISTON)	11-1
ENGINE OIL STRAINER SCREEN	3-12	(ENGINE REMOVAL/INSTALLATION)	7-1
ENGINE INSTALLATION	7-4	(ELECTRIC STARTER)	19-1
ENGINE REMOVAL	7-2	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
EXHAUST SYSTEM	2-5	(FRONT WHEEL/SUSPENSION/STEERING)	14-1
FLYWHEEL INSTALLATION	9-7	(FUEL SYSTEM)	5-1
FLYWHEEL REMOVAL	9-3	(IGNITION SYSTEM)	18-1
FORK	14-12	(LIGHTS/METERS/SWITCHES)	20-1
FRONT BRAKE CALIPER	16-16	(LUBRICATION SYSTEM)	4-1
FRONT FENDER	2-4	(MAINTENANCE)	3-1
FRONT MASTER CYLINDER	16-8	(REAR WHEEL/SUSPENSION) (TRANSMISSION)	15-1 12-1
FRONT WHEEL	14-8	SERVICE RULES	1-2
FUEL LINE	3-4	SHOCK ABSORBER	15-9
FUEL METER/FUEL UNIT	20-11	SIDE STAND	3-20
FUEL TANK	5-3		
GEARSHIFT LINKAGE	8-10		
GENERAL SAFETY	1-1		
GRAB RAIL	2-2		