

To print chapters, click on the printer icon and fill in the page range.

1.	General Information	4 - 28
2.	Frame/Body panels/Exhaust system	29 - 36
3.	Maintenance	37 - 58
4.	Lubrication system	59 - 65
5.	Fuel system	66 - 82
6.	Cooling System	83 - 98
7.	Engine removal/Installation	99 - 106
8.	Clutch/Gearshift linkage	107 - 121
9.	Alternator/Starter Clutch	122 - 130
10.	Cylinder head/Valves	131 - 154
11.	Cylinder/Piston	155 - 164
12.	Transmission	165 - 179
13.	Crankshaft/Balancer	180 - 185
14.	Front wheel/Suspension/Steering	186 - 209
15.	Rear wheel/Suspension	210 - 224
16.	Brake system	225 - 248
17.	Charging system	249 - 257
18.	Ignition system	258 - 265
19.	Electric starter	266 - 277
20.	Lights/Meter/Switches	278 - 295
21.	Wiring diagram	296
22.	Troubleshooting	297 - 300
23.	Index	301 - 302