


4. Remove the bolt (3).
5. Pull out the prong (4) from the tank stay (5) and move the coolant reserve tank (6).
- Take care not to spill the coolant.
6. Remove the oil filter (7) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

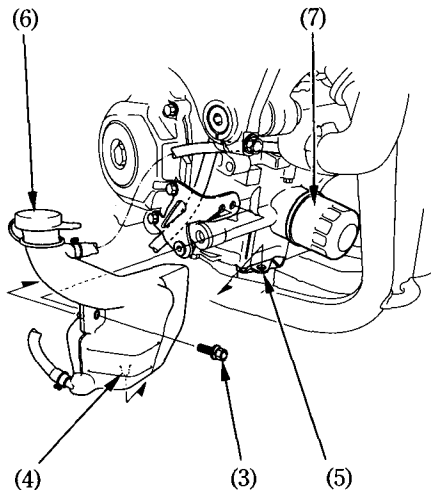

(3) Bolt
(4) Prong

(5) Tank stay
(6) Coolant reserve tank
(7) Oil filter