

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Tachometer	Shows engine rpm.
(3) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>CAUTION:</p> <p>* Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(4) Neutral indicator	Lights when the transmission is in neutral.
(5) Coolant temperature meter	Shows coolant temperature (page 12).
(6) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p>