


## WHEEL REMOVAL

Refer to the Safety Precautions on page 54 .

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Loosen the cable guide bolt (1).
3. Disconnect the front brake cable (2) from the brake arm (3).
4. Remove the front axle nut (4) and front axle. The front wheel can now be removed.

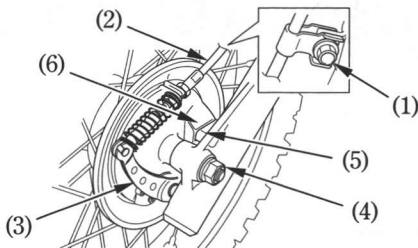

- |                       |                    |
|-----------------------|--------------------|
| (1) Cable guide bolt  | (4) Front axle nut |
| (2) Front brake cable | (5) Lug            |
| (3) Brake arm         | (6) Slot           |

### Installation:

1. Reverse the removal procedure. Make sure that the lug (5) on the fork leg is located in the slot (6) in the brake panel. Be sure to tighten the axle nut to:  
**62 N·m (6.3 kgf·m , 46 lbf·ft)**
2. Check front brake adjustment.
3. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.