
Nuts, Bolts, Fasteners


Check and tighten nuts, bolts, and fasteners before every outing.

Engine

RIGHT SIDE

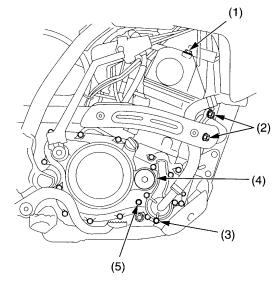

LEFT SIDE

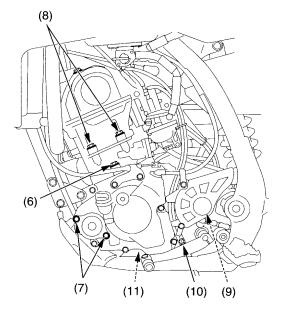

ENGINE

		Torque			D
	Item		kgf•m	lbf•ft	Remarks
1	Cylinder head cover bolts	10	1.0	7	
2	Exhaust pipe joint nuts	11	1.1	8	
3	Coolant drain bolt	10	1.0	7	
4	Crankshaft hole cap	15	1.5	11	NOTE 5
5	Transmission oil check bolt	10	1.0	7	
6	Cylinder bolt	10	1.0	7	
7	Oil filter cover bolts	10	1.0	7	
8	Cylinder head bolts	10	1.0	7	
9	Drive sprocket bolt	13	1.3	10	
10	Transmission oil drain bolt	22	2.2	16	NOTE 3
11	Engine oil drain bolt	22	2.2	16	NOTE 3

NOTES: 1. U-nut.

- 2. UBS nut.
 - . OBS nut.
- 3. Apply oil to the threads and seating surface.
- 4. Alock bolt.
- 5. Apply grease to the threads.
- 6. Apply locking agent to the threads.