


WHEEL REMOVAL

Refer to the Safety Precautions on page 43 .

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the bolts (1) securing the front fork protector.
3. Remove the front brake cable (2) from the cable guide (3).
4. Remove the front fork protectors (4).
5. Unscrew the front brake adjusting nut (5).
6. Pull the front brake lever in and disconnect the front brake cable from the brake arm (6).
7. Remove the front axle nut (7) and front axle. The front wheel can now be removed.

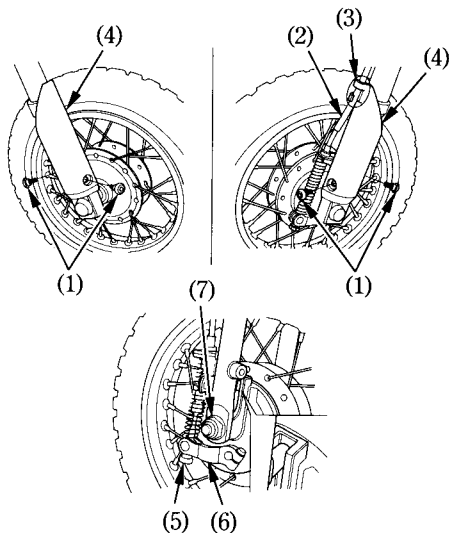

- | | |
|--------------------------|--------------------|
| (1) Bolts | (5) Adjusting nut |
| (2) Front brake cable | (6) Brake arm |
| (3) Cable guide | (7) Front axle nut |
| (4) Front fork protector | |