


AIR CLEANER

Refer to the Safety Precautions on page 47 .


The air cleaner element should be serviced at regular intervals (page 49) . If your motorcycle is operated in dusty areas, more frequent servicing will be required. Your Honda dealer can help you to determine the correct service interval for your particular riding conditions.

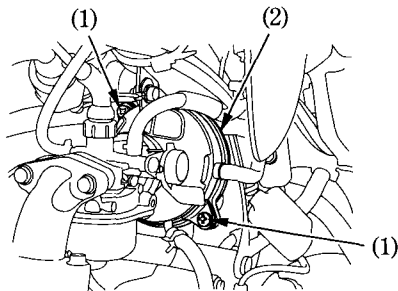

- (1) Attaching screws
- (2) Air cleaner housing cover

1. Remove the two attaching screws (1), the air cleaner housing cover (2) and air cleaner (3).
2. Wash the air cleaner in clean, nonflammable or high flash point solvent and let it dry thoroughly.

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

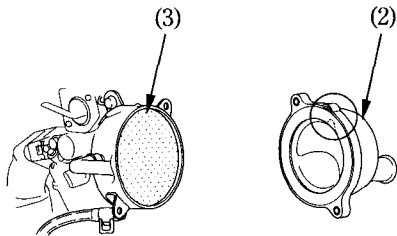

- (3) Air cleaner