

ENGINE OIL

Engine Oil Level Check

Check the engine oil level each day before operating the motorcycle.


NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

To check the oil level:

1. Start the engine and let it idle for a few minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
2. Stop the engine and hold the motorcycle in an upright position on firm, level ground.
3. After a few minutes, remove the dipstick (1), wipe it clean, and reinsert the dipstick without screwing it in. Remove the dipstick. The oil level should be between the upper (2) and lower (3) marks on the dipstick.
4. If required, remove the oil filler cap (4) and add the specified oil (page 69) up to the upper level mark. Do not overfill.

5. Reinstall the dipstick and oil filler cap. Check for oil leaks.

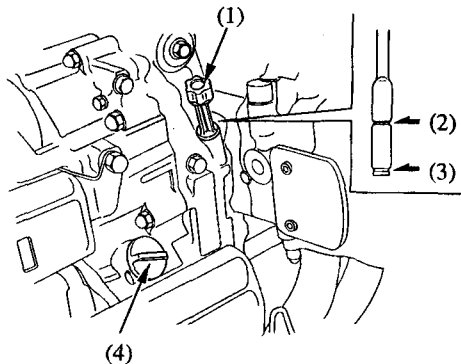

- (1) Dipstick
(2) Upper level mark

- (3) Lower level mark
(4) Oil filler cap