

## SIDE COVER

The right side cover must be removed for fuse maintenance. The left side cover must be removed to add the coolant.

### NOTICE


Failure to use extreme care removing or installing the side covers may damage the side cover hooks.

#### Removal:

1. Carefully release the grommet from the prong (2) on the frame by pulling the rear of the side cover out toward you.
2. Then release the tab (3) from the grommet on the frame by pulling the bottom of the side cover in the same direction.
3. Remove the side cover by carefully sliding it to the rear until the front hook (4) is clear of the hole in the frame.

#### Installation:

1. Insert the hook (4) into the frame hole.
2. Insert the tab (3) and prong (2) into the grommets.

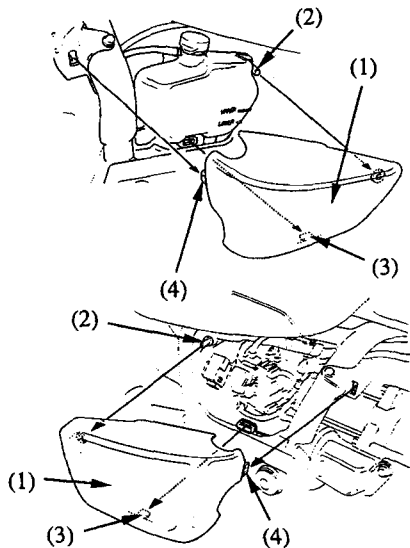

- (1) Side cover  
(2) Prong

- (3) Tab  
(4) Hook