


## CRANKCASE BREATHER

Refer to the Safety Precautions on page 60 .

1. Remove the crankcase breather tube plug (1) from the tube and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

Service more frequently when riding in rain or at full throttle.

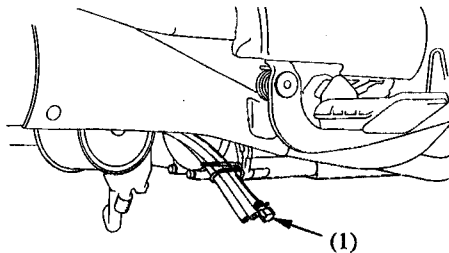

(1) Crankcase breather tube plug