

Main fuse B:

The main fuse B (1), located behind the right side cover, is:


55A

1. Turn the ignition switch OFF and disconnect the negative (-) terminal lead from the battery, before checking or replacing a fuse to prevent an accidental short circuit.
2. Remove the right side cover (page 42).
3. Remove the main fuse cover (2).
4. Loosen the screws (3) then remove the main fuse B.

The spare main fuse (4) is located in the main fuse cover.

After replacing the main fuse B, tighten the screws.

5. Install the main fuse cover and right side cover.

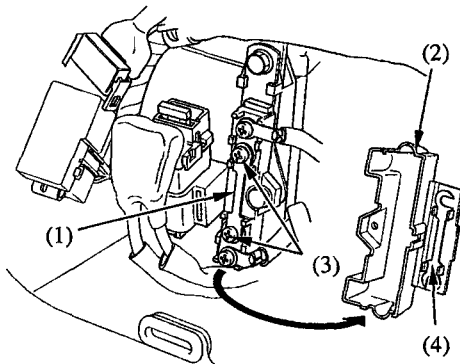

(1) Main fuse B

(2) Fuse cover

(3) Screws

(4) Spare fuse